



Item No.	Part No.	Description	Qty req'd	Comment
		CENTER BEARING ASSEMBLY		
1		Center bearing housing	1	
2		Center bearing cover plate	2	
3		Center bearing pin shaft	1	
4		Center bearing sleeve	2	
5		Center bearing oil seal	2	
6		Center bearing	2	
7		Center bearing spacer (between bearings)	1	
8		Center bearing cover plate lock washer	12	
9		Center bearing castle washer	1	
10		Center bearing cover plate bolt	12	
11		Center bearing pin shaft castle nut	1	
12		Center bearing to walking beam lock nut	4	
13		Center bearing to walking beam nut	4	
14		Center bearing to walking beam washer	4	
15		Center bearing to walking beam bolt	4	
16		Center bearing gasket	2	
17		Center bearing grease relief	1	
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				