



Item No.	Part No.	Description	Qty req'd	Comment
		CRANK PIN ASSEMBLY		
1		Crank pin castle nut	1	
2		Crank pin spacer	1	
3		Crank pin sleeve	1	
4		Crank pin shaft	1	
5		Crank pin cotter pin	1	
6		Crank pin key	1	
7				
8		Crank pin housing	1	
9		Crank pin oil seal	1	
10		Crank pin bearing	1	
11		Crank pin end plate	1	
12		Crank pin end plate bolt	2	
13		Crank pin gasket	1	
14		Crank pin cover plate	1	
15		Crank pin cover plate lock washer	6	
16		Crank pin cover plate bolt	6	
17		Crank pin grease zerk	1	
18		Crank pin grease relief	1	
19				
20				
21				
22				
23				
24				
25				
26				
27				